


Model 1921 1934-35 I.F. 456 Kc.

VOLTAGES SHOWN ARE APPROX. READINGS THAT SHOULD BE OBTAINED BETWEEN POINT WHERE VOLTAGE IS INDICATED AND GROUND (CHASSIS), WITH A 1000 OHMS PER VOLT VOLTMETER, USING 300 VOLT RANGE EXCEPT VOLTAGES THAT ARE MARKED * WHICH CANNOT BE MEASURED WITH AN ORDINARY VOLTMETER

C37, C38, C39, C40, C41 & C42 ARE 456 KC. I.F. ALIGNING CONDENSERS.

ITEM	CAPACITY
C1	5 MFD
C2	5
C3	5
C4	16
C5	1
C6	1
C7	1
C8	1
C9	1
C10	1
C11	1
C12	1
C13	1
C14	1
C15	1
C16	1
C17	1
C18	1
C19	1
C20	1
C21	1
C22	1
C23	1
C24	1
C25	1
C26	1
C27	1
C28	1
C29	1
C30	1
C31	1
C32	1
C33	1
C34	1
C35	1
C36	1
C37	1
C38	1
C39	1
C40	1
C41	1
C42	1

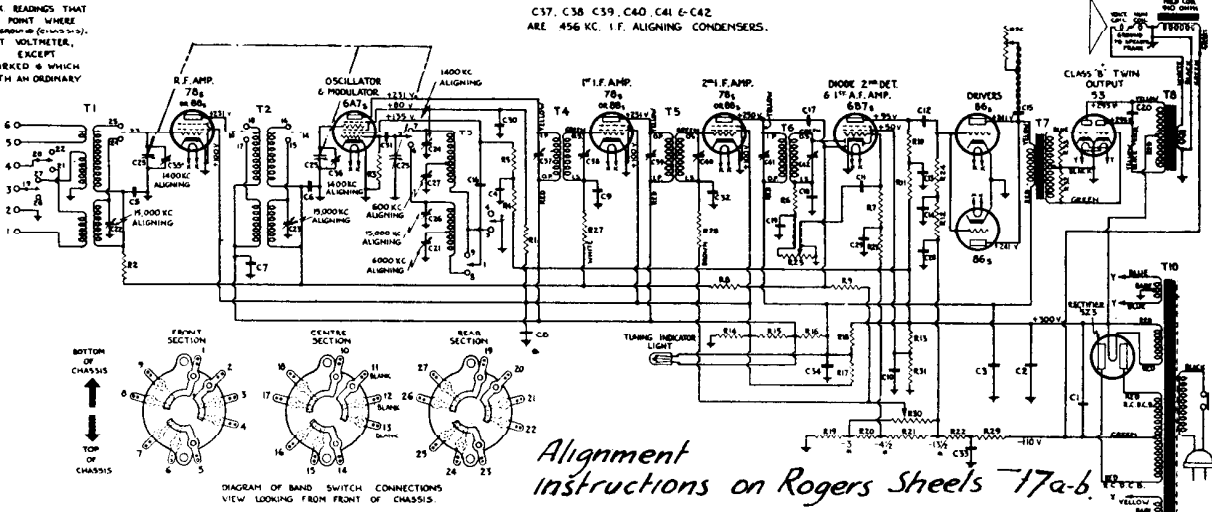


BOTTOM OF CHASSIS
↑
TOP OF CHASSIS

DIAGRAM OF BAND SWITCH CONNECTIONS VIEW LOOKING FROM FRONT OF CHASSIS.



Alignment instructions on Rogers Sheets 17a-b.

THE "AMBASSADOR" MODEL

ITEM	RESISTANCE
R1	1000 OHMS
R2	50000
R3	100000
R4	50000
R5	100000
R6	100000
R7	500000
R8	100000
R9	100000
R10	100000
R11	100000
R12	100000
R13	100000
R14	100000
R15	100000
R16	100000
R17	100000
R18	100000
R19	100000
R20	100000
R21	100000
R22	100000
R23	100000
R24	100000
R25	100000
R26	100000
R27	100000
R28	100000
R29	100000
R30	100000

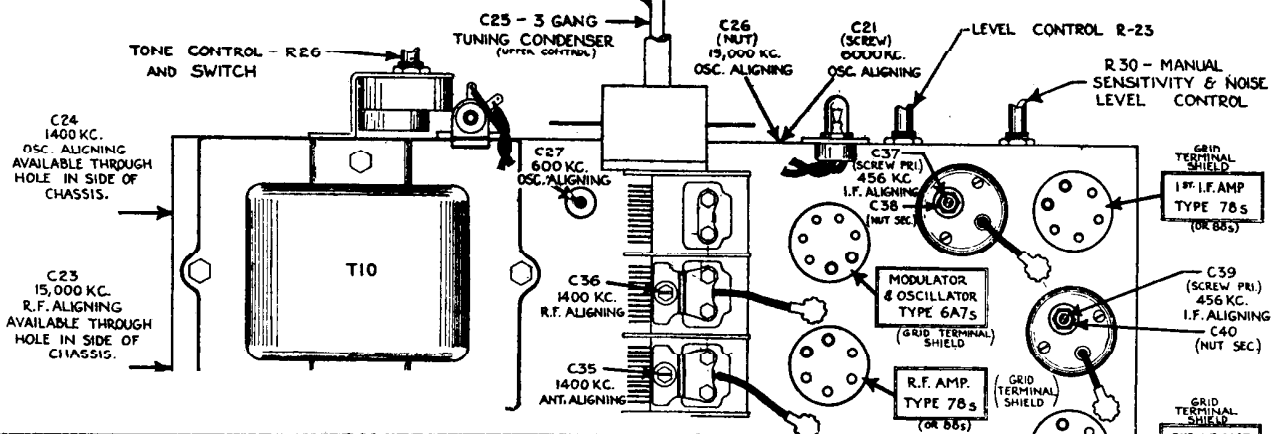

THE "WORLD-WIDE" MODEL - CIRCUIT ON SHEET 26

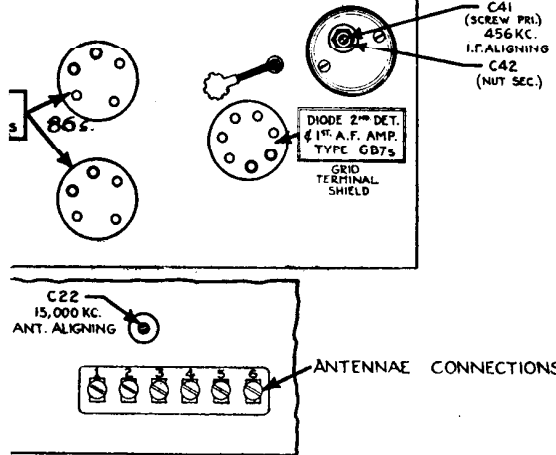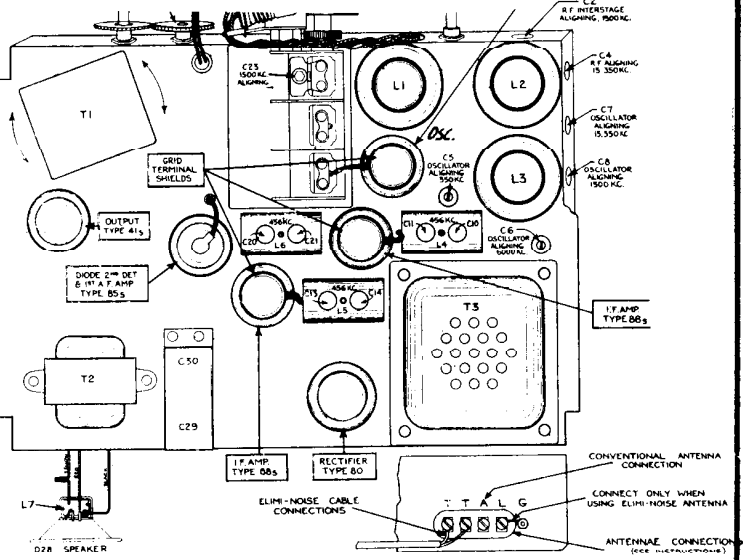

see Rogers Sheets 17a-b